

How to Apply Your Window Film

This guide provides **step-by-step instructions** for applying window film to flat glass surfaces. It covers the required materials, preparation steps, application process, and care instructions.

Follow these detailed steps to ensure a successful and professional-looking window film installation.



+353 1 450 0622



info@windowfilm.ie



Ballymount, Dublin—Ireland

Required Materials:

Before applying the window film, you'll need to gather the necessary materials and prepare the glass surface.



Cutter



Ruler



Squeegee



Paper towel




A spray bottle with a solution of 1 liter of water and 50 ml of dishwashing detergent.



Windowfilm of choice

Preparation and Cutting

Before applying the window film, you'll need to gather the necessary materials and prepare the glass surface.

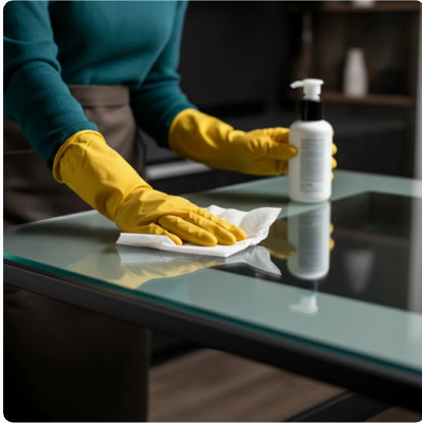


1. Cleaning

Carefully clean the glass. Dry the edges with paper towel.



2. Cutting

Cut the film based on the size of the window. Include 1 or 2 extra cm. Use a cutter and a ruler to make straight and even cuts.

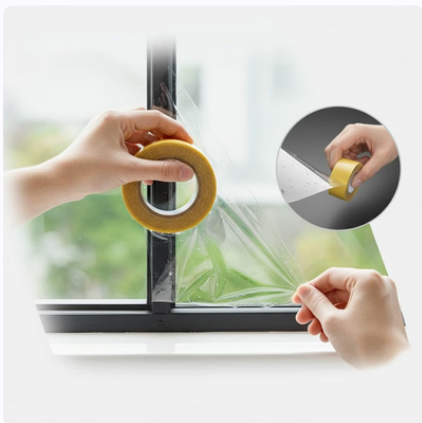

3. Preparation

Reposition two pieces of scotch tape on each side of a film corner to lift the protective layer in the next step.

Applying the Film

Adhesive films can be applied internally on all types of flat glass. The adhesive side is protected by a layer which is lifted just before fitting the film.




4. Lift the adhesive layer

One person holds the adhesive film vertically by the corners (sticky side facing out). Another person pulls down the protective layer, spraying soapy solution on the adhesive.



5. Fitting the film

Cut the film based on the size of the window. Include 1 or 2 extra cm. Use a cutter and a ruler to make straight and even cuts.

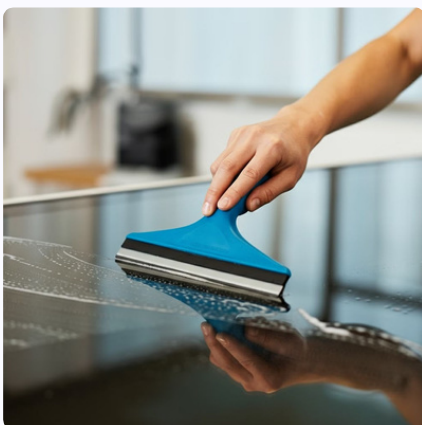

6. Release air bubbles

Spray the non-adhesive side of the film with soapy solution. Use a squeegee to flatten the film, starting at the top and working from the center to the sides with short, horizontal movements. Work from top to bottom, applying pressure and holding the film with your free hand to prevent shifting.

Finishing and Care

Ensure proper trimming, flattening, and drying of the film to prevent bubbles and ensure a smooth finish.



7. Cut the film edges

With a cutter and a ruler, cut the film on the four sides in order to leave a space of approx. 1.5 mm between the film and the window frame (if the film touches the frame there could be a risk of "tunnels"). Remove the tape.



8. Flatten the film edges

Do step 6 once again by wetting the film slightly. Draw the squeegee over the film particularly the edges.



9. Finishing

Using paper towel wipe and carefully dry out all traces of water along the edges of the film to prevent water from filtering under the film again.

Care Instructions

You should look after film in the same manner as glass. Use classic glass cleaning products and draw on the squeegee. Do not clean dry. Do not use brushes, fabrics or abrasives.



10. Drying

Do not wet nor touch the film. Let it dry for approximately 2 to 3 weeks.

Film Cleaning Do's and Don'ts



Do

- Use classic glass cleaning products
- Apply squeegee for effective cleaning
- Clean when wet



Don't

- Clean when dry
- Use brushes or abrasives
- Apply fabrics directly